




BOOSTER IRIS SIGHT WITH TARGET EXTENSION

SETUP INSTRUCTIONS

IRIS SYSTEM

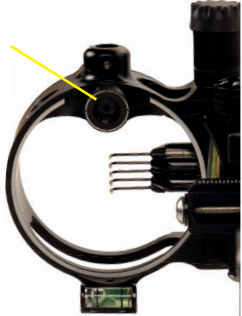


CENTER THE DOT FOR A PERFECT SHOT!

STOP

DO NOT ADJUST ANY OF THE IRIS MICRO ADJUSTMENTS!!!



STEP 1: Mounting Sight To Bow

Mount the mounting bracket onto your bow with the bow mounting screws provided. Mount the sight on the bow, sliding the extension into the mounting base and fixing the fixing bolt.

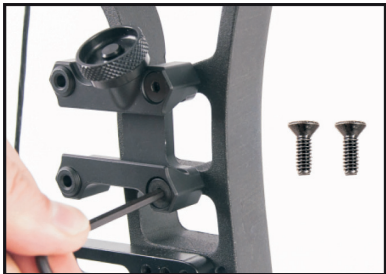

STEP 2: Top Pin Adjustment

Set your top pin to your preferred position of the sight housing using the hex key provided (we recommend the top 1/3 of the sight housing). With both the windage and elevation Tool-Less locking knobs loosened, use the micro adjustments to sight in your first pin at your preferred distance (we recommend 20 yards), then tighten the Tool-Less locking knobs.

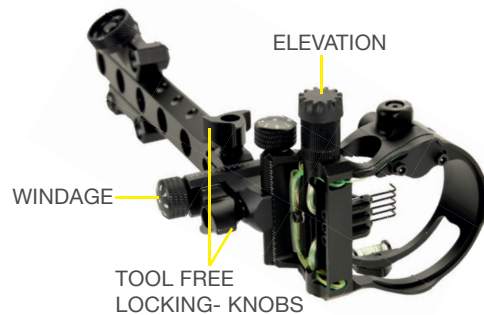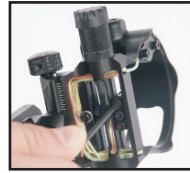

STOP

BEFORE BEGINNING STEP 3 MAKE SURE YOUR TOP PIN IS SIGHTED IN.

STEP 3: IRIS System Adjustment

Once your top pin is accurately sighted in, it's time to adjust your Iris System. Draw your bow using the same form/anchor point used to set your top pin and look at the green Iris System.


IRIS ALIGNMENT SYSTEM



IRIS SYSTEM ADJUSTMENT

1) If you see the green Iris System, adjust it until the black dot is centered within the green area using the micro adjustments located on the top and top side of sight. Remember you are adjusting the green Iris System to fit your form/anchor point. Repeat this step until the black dot is centered in the green area - at your form/anchor point.

UP AND DOWN

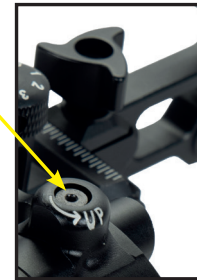

LEFT AND RIGHT



2) If you don't see the green Iris Lock at your form/anchor point you will need to move your anchor point up or down and possibly left or right until you find the green Iris System. Once you've determined the direction of the green Iris System, use the micro adjustments located on the top and top side of sight to adjust the green Iris System to fit your form/anchor point. The micro adjustment on the top of the sight is to move the green Iris System up and down and the micro adjustment on the top side of sight moves it to the left and to the right - **REMEMBER YOU ARE MOVING THE GREEN AREA.** Repeat this step until the black dot is centered in the green Iris System - at your form/anchor point.

HOW TO ADJUST

If the green area is high and to the right, you will need to move the adjustment low and to the left to try and center the black dot in the green area at your form/anchor point. Repeat process as needed. Once your black dot is centered in the green area of the Iris Alignment System **AT YOUR FORM/ANCHOR POINT** it's time to sight in the rest of your pins!

LOCKING KNOB



LOCKING KNOB


www.BoosterArchery.com

Made in China

MOUNTING BLOCK
QUIVER COMPATIBLE

TOOL-FREE LOCKING KNOBS


BOW SIGHT LIGHT

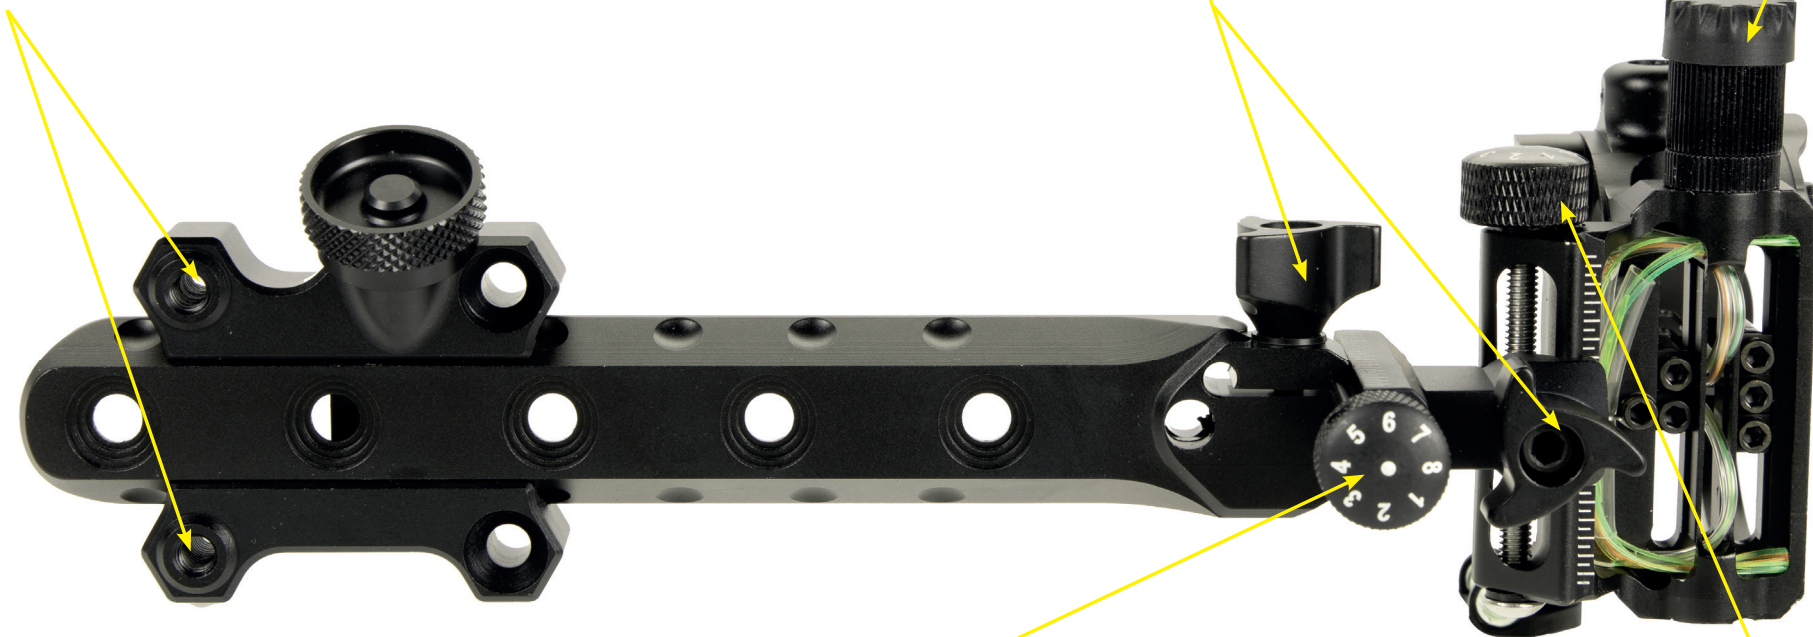

INCREMENTAL WINDAGE
MICRO ADJUST KNOB

INCREMENTAL ELEVATION
MICRO ADJUST KNOB

IRIS
SYSTEM

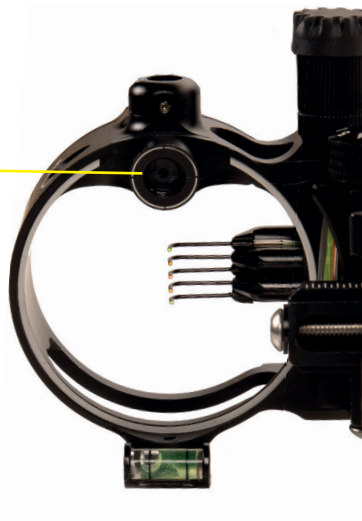

IRIS ALIGNEMENT SYSTEM

Provides instant feedback that will identify even the slightest torque or anchor point change.

PARTS INCLUDED



Bow Mount
Screws

